

The programming / modification of the default settings is made simply by SMS commands from an SMS-capable terminal to the SIM card in the NR-03 (detailed description of the commands in the manual).

Stationary emergency call system:

Insert the emergency transmitter with SIM card (SIM card not included) of the NR-03 into the base station. Position the station in a suitable location with sufficient GSM reception. A red LED indicates the charging of the internal battery as well as the correct operating status of the NR-03. When an SOS signal is sent from the collar / bracelet transmitter, a radio signal is sent to the base station and relayed to the GSM module in the emergency transmitter, which then sequentially informs all stored telephone numbers and automatically establishes a connection upon call acceptance. The range of the collar / bracelet transmitter is about 50 m in the apartment with 3 walls in between.

Mobile emergency call system:


As soon as you leave your apartment, simply remove the emergency transmitter from the base station and use the emergency call function via the emergency call button on the way.

Important:

All three devices (emergency call transmitter NR-03 + wristband + collar transmitter) are splash-proof! Rain and water while showering or washing are no problem (please do not press under water).

NEW: Now with optionally switchable fall sensor

The fall detector in the emergency call system now provides senior or vulnerable persons the necessary protection in the event of falls. You can set the sensitivity of the sensor as desired, for more information, please refer to the operating instructions.

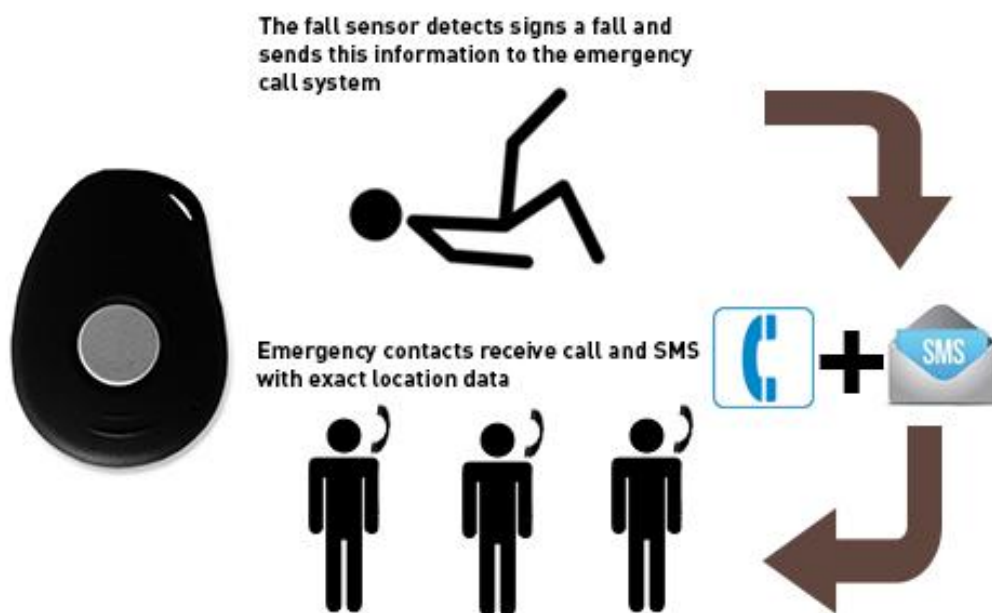

GPS tracking:

This small GPS emergency transmitter can be easily located after switching on. To do this, send an SMS with a specific text to the inserted SIM card that is in the device and you will receive an SMS with the last coordinates as Google Maps link back. Click on the link to see the last known position of the person on the map.

Small, handy, practical

You can also make and receive a phone call (not with a bracelet / necklace transmitter) with this handy small emergency transmitter. The large SOS button in the center of the emergency transmitter is used to make a call for help. This can be preset to up to three destination phone numbers, such as those of nurses, friends, emergency call centers or parents. When the alarm is triggered, the three preset telephone numbers are called in sequence. An SMS notification will be sent to all 3 phone numbers. All settings are made via SMS.

Note:

Communication with the emergency call system can only be made directly via the emergency call transmitter in the base station and not via the arm and neck band transmitters. These are designed exclusively for the discontinuation of an emergency call. Please take this into consideration when choosing the location of the base station with the emergency transmitter in the apartment.

The ideal emergency call companion for home or on the road